


ASSEMBLY INSTRUCTION

JOINING THE EDGES OF THE GREENFOND DRAIN DRAINAGE MAT WITH GREENFOND DUO TAPE

1. Try on the two edges of the mats to be joined.

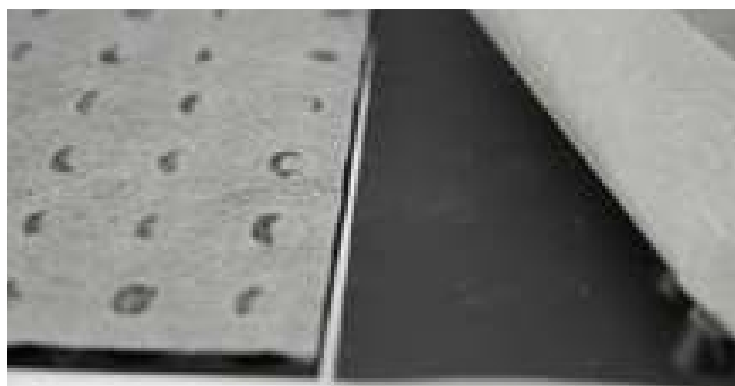

2. Apply GREENFOND DUO TAPE to the flat edge of the mat.



3. Cut off the right amount of the tape.




4. Pull off the paper securing the GREENFOND DUO TAPE.



ASSEMBLY INSTRUCTION

JOINING THE EDGES OF THE GREENFOND DRAIN DRAINAGE MAT WITH GREENFOND DUO TAPE

5. Apply the second mat to the flat edge with adhesive tape.

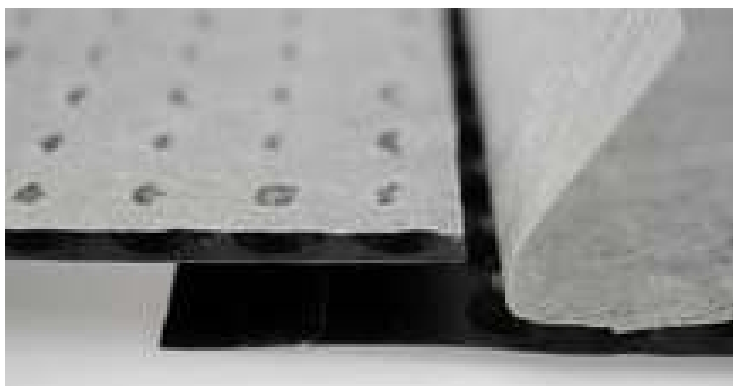

6. Place the fleece over the joined edges.

